

MAINSTREET GOLD MENU SYSTEMS

RACEWAY REPLACEMENT INSTRUCTIONS

STEP 1

Disconnect the menu system from power source.

STEP 2

Remove the door and all lamps from the menu system lightboxes requiring raceway replacement (see Diagram 1).

STEP 3

Remove all the Phillips head screws from around the black perimeter of the raceway and Phillips head screws from the white inside of the raceways (previously hidden by the lamps). (See Diagram 2).

NOTE: Refer to Diagram 5 for placement of screws that should not be removed.

STEP 4


Grasp the raceway by the finger grabs on the bottom of the raceway and gently remove the raceway (see Diagram 3).

STEP 5

Orient the new raceway by viewing the "This side up" label. The raceway should slide under the spring hinge retainer and fall into place engaging the electrical connector smoothly (see Diagram 4). Replace all screws, lamps and door. Restore power to the menu system. If it does not light, refer to the troubleshooting guide in the installation and assembly guide provided with your Gold System.

WARNING: The maximum allowable current draw from one master cord is 9 AMPS. To determine total system current draw, add up the AMP rating labeled on the inside of each lightbox, or refer to Table 1.

DIAGRAM 1

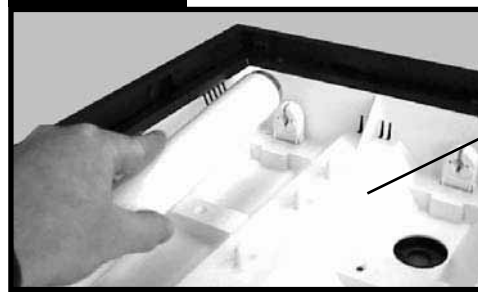


Raceway

DIAGRAM 2




DIAGRAM 3

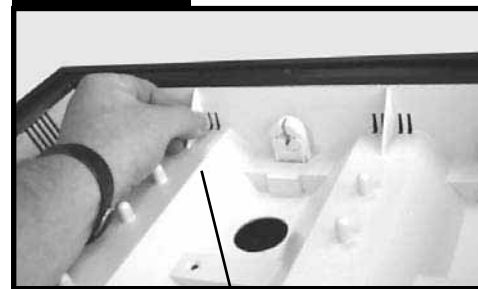

Finger Grabs

DIAGRAM 4

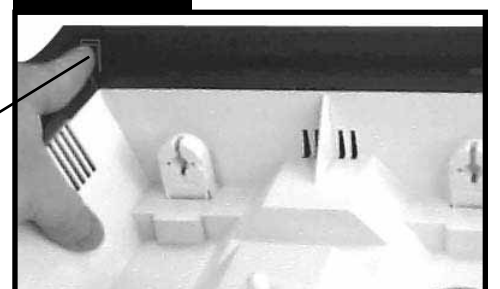

Spring Hinge Retainer


TABLE 1

REPLACEMENT RACEWAY CURRENT DRAW BY BOX


18" x 18"	A (Module)	.45 AMPS
18" x 27"	D (Module)	.57 AMPS
27" x 9"	H (Module)	.19 AMPS
27" x 18"	E (Module)	.57 AMPS
27" x 27"	F (Module)	.76 AMPS
36" x 27"	G (Module)	1.14 AMPS

DIAGRAM 5


Light Box Specifications

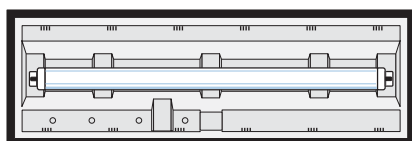


27" x 9" (H Module)

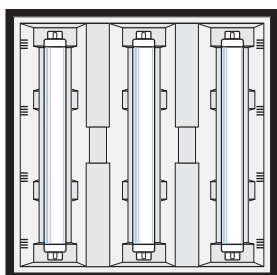

18" x 18" (A Module)

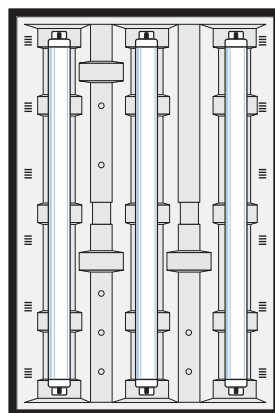


18" x 27" (D Module) shown
or
27" x 18" (E Module)
rotated 90°

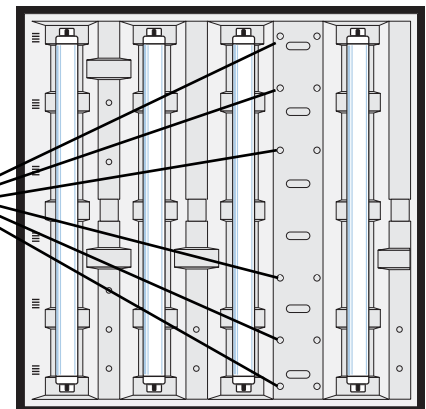

Do not remove
(12) screws
in this area.

27" x 27" (F Module)

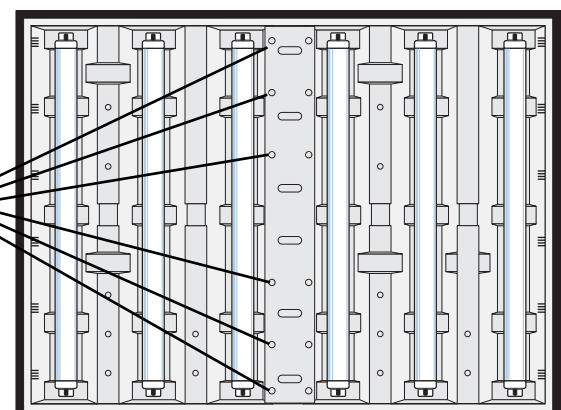


Do not remove
(12) screws
in this area.

36" x 27" (G Module)

SUPPLEMENT INSTRUCTIONS FOR CORE RACEWAY REPLACEMENTS

If you have discovered that the screws in your replacement raceways do not properly align, please follow the instructions below. This is caused by changes made to this product between production runs. **NOTE: Make sure your menu board is unplugged before you begin to replace raceways.**

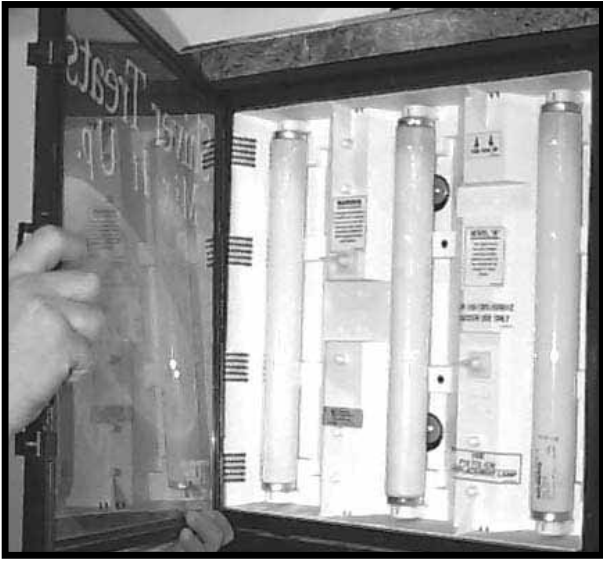


STEP 1 Carefully lift and pull the cover panel out.



STEP 2 Remove all lamps from old raceways.



STEP 3 Remove (6) short screws around the outer edge of the old raceway.

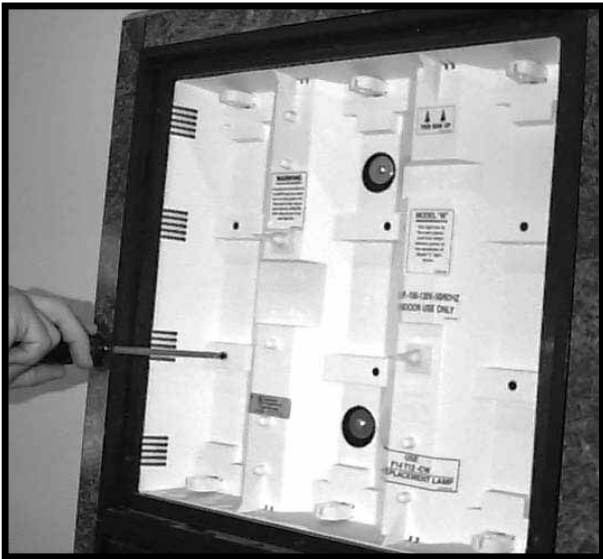

STEP 4 Remove (6) inside screws located of the old raceway, (do not discard) you will re-use them. When all screws are out, remove the old raceway.



STEP 5 Remove the (6) existing long screws, on the outer edge of lightbox.



STEP 6 Insert new raceway into lightbox and align holes. Reinstall the (6) long screws on outer edge, and the inside mounting screws.



The Howard Company, Inc.
1375 North Barker Road
Brookfield, WI 53045
Telephone: (414) 782-6000 • (800) 782-6222 • Fax: (414) 782-6515
Internet: <http://www.MainstreetMenus.com> E-Mail: CustomerService@MainstreetMenus.com